


How it works


1. Open the valve

Only after connection with the plug, you can slide the socket sleeve B toward the plug in order to open the built-in valve. Full flow path is then obtained.

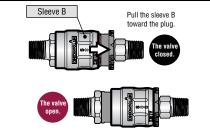


2. Lock the sleeve

Rotate the flange to lock the sleeve B. Without unlocking the plug you cannot

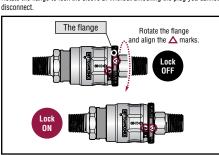

3. Purge the residual air

To disconnect the plug, first turn the flange back to the original position for unlocking and then pull the sleeve B back to the original position. The built-in valve will be closed to purge the residual air pressure.

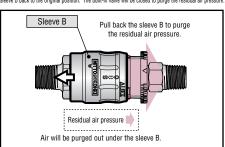

Before use, please be sure to read "Safety Guide" described at the end of this book and "Instruction Sheet" that comes with the products.