
#### Accessories for **O-ring Maintenance** (Part.No.CB23687) · Sales unit: 1pc. Jigs & grease for replacement of O-rings for SP Cupla, TSP Cupla and HSP Cupla


### Accessories for Cuplas

 • Quality of seal materials plays an important role in maintaining the performance of a Cupla. O-rings or seal materials of SP Cupla, TSP Cupla and HSP Cupla are designed to be replaceable. Please be certain to choose the correct O-ring in order to maintain the performance of Cuplas.

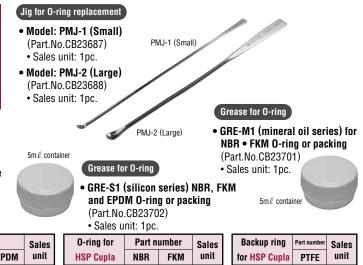

						• Sales unit: 1pc.										
O-ring for	Part number			Sales	1	O-ring for	Part number			Sales	Γ	O-ring for	Part number		Sales	Backup ring
SP Cupla	NBR	FKM	EPDM	unit		TSP Cupla	NBR	FKM	EPDM	unit		<b>HSP Cupla</b>	NBR	FKM	unit	for HSP Cupi
For 1S	CP01314	CP00907	CP03270	1		For 1TS	CP03987	CP04984	CP09795	1		For 2HS	CP01185	CP02215	1	For 2HS
For 2S	CP00927	CP00928	CP03333	1	1	For 2TS	CP01314	CP00907	CP03270	1		For 3HS	CP01194	CP03335	1	For 3HS
For 3S	CP00955	CP00956	CP03276	1	1	For 3TS	CP00927	CP00928	CP03333	1		For 4HS	CP00294	CP02093	1	For 4HS
For 4S	CP00978	CP00979	CP03283	1	1	For 4TS	CP00955	CP00956	CP03276	1		For 6HS	CP00294	CP02093	1	For 6HS
For 6S	CP01003	CP01004	CP03292	1	1	For 6TS	CP00978	CP00979	CP03283	1		For 66HS	CP09658	CP25937	1	For 66HS
For 8S	CP01029	CP01030	CP03298	1	1	For 8TS	CP00387	CP01258	CP04923	1	Γ	For 8HS	TP00293	CP01179	1	For 8HS
For 10S	CP00398	CP01053	CP07179	1	1	For 10TS	CP01273	CP01274	CP09221	1		For 10HS	CP01516	CP03371	1	For 10HS
For 12S	CP01076	CP01077	CP03902	1	1	For 12TS	CP00398	CP01053	CP07179	1	ſ	For 12HS	CP01516	CP03371	1	For 12HS
For 16S	CP01099	CP01100	CP06953	1		For 16TS	CP01304	CP01305	CP09794	1		For 16HS	CP03035	CP03453	1	For 16HS

How to detach an O-ring











CP01186

CP01195

CP01203

CP01203

CP09659

CP01211

CP01517

CP01517

CP03036

1

1

1

1

1

1

1

1

1

Press the O-ring into the socket's O-ring groove with the iig

## **Residual Pressure Release Jig**

Residual Pressure Release Metal Jig

### Accessories for Cuplas

- · Residual pressure within socket or plug can be released easily just by turning the handle.
- Residual pressure release jigs are available in two types; socket type for use with plugs and plug type for use with sockets.
- · Connecting to sockets or plugs is the same as connecting normal Cuplas.



The photos show the jigs for HSP Cupla

Model	Attachable Cuplas	Sales unit
The model name is to be defined in the following manner.   Z N - Type of Cupla to be attached Example: For the Cupla model 350-3S, the jig name would be ZN-350-3S	Sockets and plugs for SP Cupla, HSP Cupla, 210 Cupla, 280 Cupla and 350 Cupla	1pc.

# **Purge Adapter**

Metal Purge Adapter for hydraulic lines

## Accessories for Cuplas (Semi-standard)

#### • Can be attached to hydraulic lines to purge residual pressure effectively.

Model	PAD-2 (Part No.CB19855)
Applicable fluid	Hydraulic oil
Material	Steel (with autocatalytic Nickel-Phosphorus coating)
Working pressure MPa{kgf/cm <sup>2</sup> }	35.0 {357}
Pressure resistance MPa{kgf/cm <sup>2</sup> }	52.5 {536}
Working temperature range	−5°C~+80
Working pressureMPa{kgf/cm²}Pressure resistanceMPa{kgf/cm²}	35.0 {357} 52.5 {536}

