



Steel

Socket SH-BL type (Hose barb)

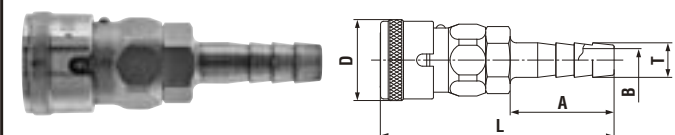


Model	Application (Hose)	Mass (g)	Dimensions (mm)				
			L	ØD	A	ØT	ØB
20SH-BL	1/4"	103	(72.5)	(26.5)	30	9	5
30SH-BL	3/8"	106	(76.5)	(26.5)	34	11.3	7.5
40SH-BL	1/2"	118	(78.5)	(26.5)	36	15	9

Socket SM-BL type (Male thread)

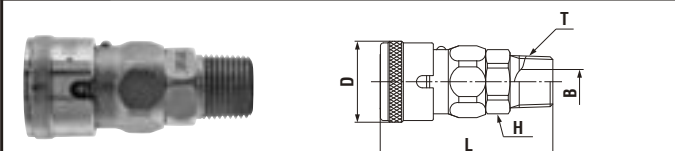


Model	Application	Mass (g)	Dimensions (mm)				
			L	ØD	H(WAF)	T	ØB
20SM-BL	Rc 1/4	101	(55.5)	(26.5)	Hex.19	R 1/4	7
30SM-BL	Rc 3/8	108	(56.5)	(26.5)	Hex.19	R 3/8	8
40SM-BL	Rc 1/2	131	(59.5)	(26.5)	Hex.23	R 1/2	9

Socket SF-BL type (Female thread)

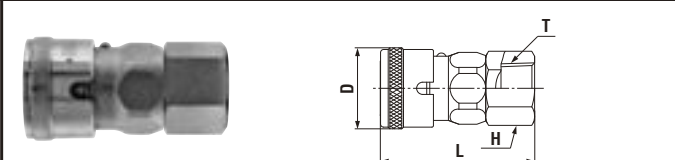

Model	Application	Mass (g)	Dimensions (mm)			
			L	ØD	H(WAF)	T
20SF-BL	R 1/4	95	(49.5)	(26.5)	Hex.19	Rc 1/4
30SF-BL	R 3/8	103	(50.5)	(26.5)	Hex.21	Rc 3/8
40SF-BL	R 1/2	139	(52.5)	(26.5)	Hex.29	Rc 1/2

Socket SN-BL type (For urethane hose connection)

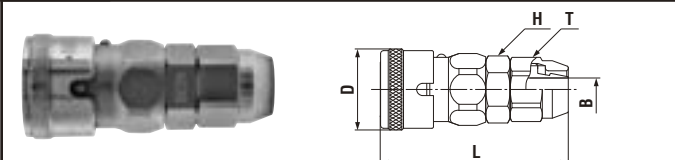


Model	Application (Hose)	Mass (g)	Dimensions (mm)				
			L	ØD	ØB	H(WAF)	T(WAF)
65SN-BL	ø6.5 x ø10	115	(59.5)	(26.5)	5.3	Hex.19	Hex.17
80SN-BL	ø8 x ø12	120	(61.5)	(26.5)	7.5	Hex.19	Hex.19
85SN-BL	ø8.5 x ø12.5	120	(61.5)	(26.5)	7.5	Hex.19	Hex.19

• Above pictures are sockets of 30 and 80 models.


Stainless steel

Socket SH-BL type (Hose barb)

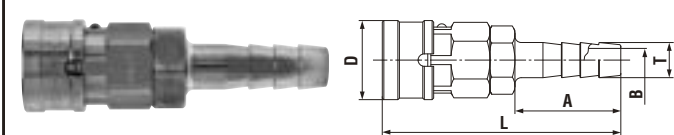


Model	Application (Hose)	Mass (g)	Dimensions (mm)				
			L	ØD	A	ØT	ØB
20SH-BL	1/4"	100	(72.5)	25.4	30	9	5
30SH-BL	3/8"	101	(76.5)	25.4	34	11.3	7.5
40SH-BL	1/2"	118	(78.5)	25.4	36	15	9

Socket SM-BL type (Male thread)

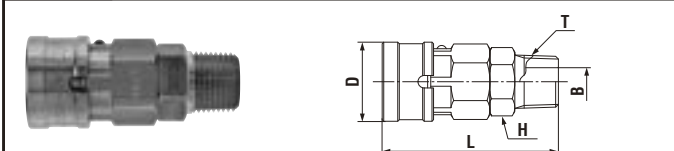

Model	Application	Mass (g)	Dimensions (mm)				
			L	ØD	H(WAF)	T	ØB
20SM-BL	Rc 1/4	96	(55.5)	25.4	Hex.19	R 1/4	7
30SM-BL	Rc 3/8	105	(56.5)	25.4	Hex.19	R 3/8	8
40SM-BL	Rc 1/2	120	(59.5)	25.4	Hex.22	R 1/2	9


Socket SF-BL type (Female thread)

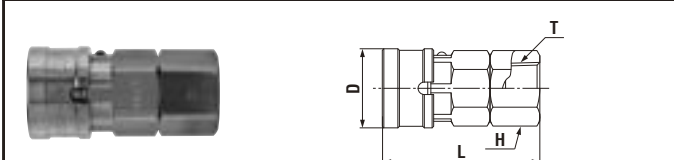

Model	Application	Mass (g)	Dimensions (mm)			
			L	ØD	H(WAF)	T
20SF-BL	R 1/4	98	(49.5)	25.4	Hex.19	Rc 1/4
30SF-BL	R 3/8	99	(50.5)	25.4	Hex.21	Rc 3/8
40SF-BL	R 1/2	138	(52.5)	25.4	Hex.29	Rc 1/2

Unlocked

Align the cutout in the sleeve with the ball stopper, and pull the sleeve to connect the plug.

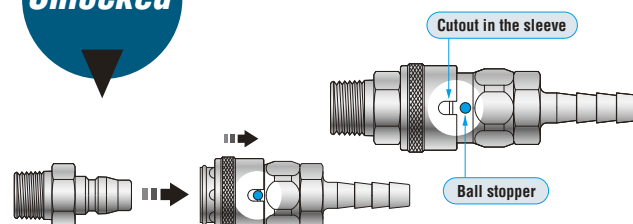


The stopper is marked with blue for visual understanding.

Locking the sleeve

Without alignment of the cutout with the ball stopper disconnection cannot be made.

Accidental disconnection is prevented.

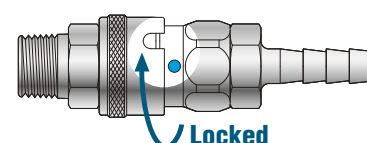

Align the cutout in the sleeve with the ball stopper, and pull the sleeve for disconnection.

